

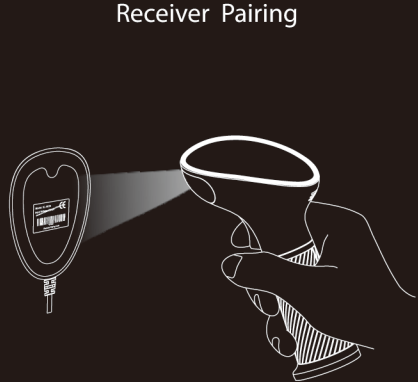


StarAsia HCR12BT

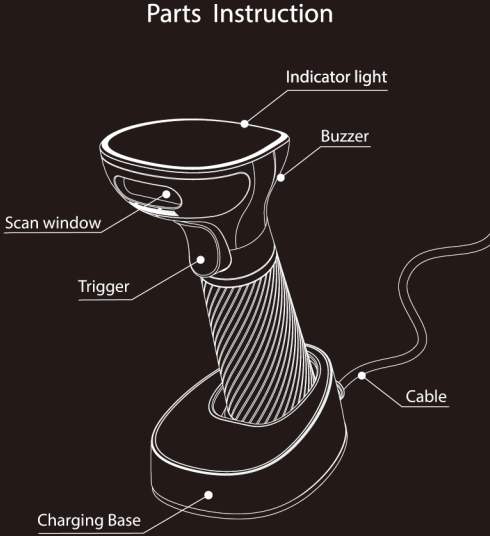

Scan the “Receiver Pairing Code ” on the base
Factory Default: barcode scanner paired with base

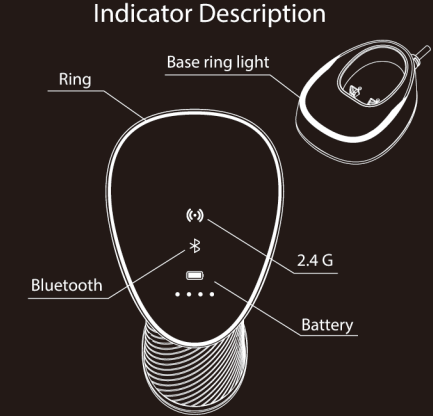

Indicator Description	
Indicator Type	Details Description
Battery	Four bars , charging flash
Wireless status	Bluetooth/2.4G connection
Pairing	Bluetooth/2.4G quick flash
Scanner ring light	One flash for one successful scanning
Base ring light	One flash for one successful data transferring Slow flash for pairing mode

Product Introduction

This is the simple user’s manual, for detailed manual, please download from our website or contact the supplier. (With * is the Default Setting)



If scanner cannot be used normally due to an error setting, try to scan the “Factory Default” code above.

Buzzer Description	
Voice Type	Details Description
One medium long high voice	Successful scanning or pairing
Three continuous short voice	Alarm prompt

Wireless Transmission Mode



Receiver Pairing



Scanning the “Receiver Pairing” code, scanner will enter the automatic pairing mode for 1 minute, then re-insert the receiver to the host. There will be a sound heard when pairing successfully.



Scan the “Bluetooth HID Pairing” barcode, the scanner is ready to pair with other bluetooth devices.



Data Transfer Mode



Interface Type



Sleep Time



Language



Language



*For more languages setting, please refer to the full manual.

Terminator



STAR ASIA
HCR12BT

Wireless Barcode Scanner